

REV100 - ASSEMBLY MANUAL

PACKING LIST

Frame	pcs
Column	2
Feet	2
End pipe	2
Outer pipe	4
Connection pipe	2
Cable clamp	8
Rubber grip	4
Rubber washer	18
Hole cap	4
Control Box / Hand control	pcs
Control Box / Hand control Control box	pcs 1
	•
Control box	1
Control box Hand control	1
Control box Hand control AC cable	1 1 1
Control box Hand control AC cable Screws	1 1 1 pcs
Control box Hand control AC cable Screws Screw for motor house / Outer pipe, M6x16mm	1 1 1 pcs 8
Control box Hand control AC cable Screws Screw for motor house / Outer pipe, M6x16mm Screw for feet, M10x16mm	1 1 1 pcs 8
Control box Hand control AC cable Screws Screw for motor house / Outer pipe, M6x16mm Screw for feet, M10x16mm Tailstock for connection pipe, M10x20mm	1 1 1 pcs 8 8

Tightening torque	
Tailstock	Maximum 6Nm
Screw for motor house and outer pipe	Maximum 10Nm
Screw for feet and tabletop	Maximum 10Nm
Screw for hand control	< 6Nm

Make sure all screws are tightened, also after a period of use!

Reset the desk before use

Press both up and down buttons at the same time for 3 seconds.

Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.

WARNING

Carefully arrange all the cables not to be damaged by tabletop screws.













