

REV1700 - ASSEMBLY MANUAL

PACKING LIST

1 AOKING LIGT	
Frame	pcs
Column	1
Feet	1
Top table frame	1
Cable clamp	9
Rubber washer	6
Control box / Hand control	pcs
Control box	1
Hand control	1
AC cable	1
Screws	pcs
Screw for motor house, M6x16mm	4
Screw for feet, M10x30mm	4
Screw for tabletop, Ø5x20mm	6
Screw for hand control, Ø4x22mm	2

Tightening torque	
Screw for motor house	Maximum 10Nm
Screw for feet and tabletop	Maximum 10Nm
Screw for hand control	< 6Nm


Make sure all screws are tightened, also after a period of use!

Reset the desk before use

Press both up and down buttons at the same time for 3 seconds.

Continue pressing the buttons until both columns are in lowest position.

When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.

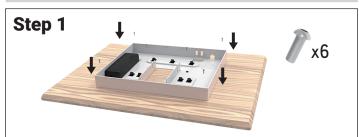

WARNING

Carefully arrange all the cables not to be damaged by tabletop screws.

